



PLATFORM WHEELCHAIR LIFT

SPECIFICATION

01

Model

Platform Lift

Lifting Speed

0.1m/sec


Entry & Exit

Same side / 90° / 180° entrance and exit

Weight Capacity

350kg

Travel Height

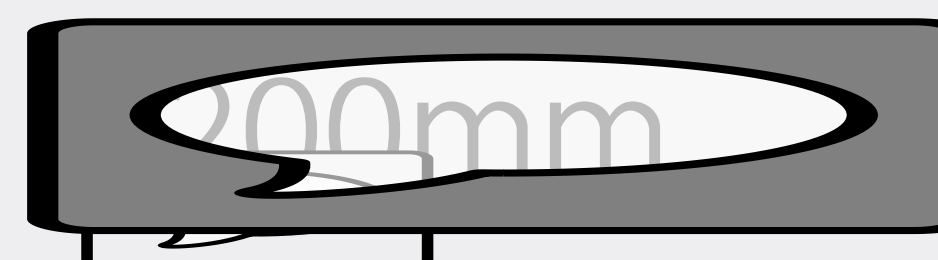

Drive system

Hydraulic power unit system

Power

Single phase, 16amp

Control

Button control and remote control

Landing

2

Working environment

Outdoor/indoor

Installation

No need pit, directly fixed on the concrete floor,
concrete thickness not less than 200mm

Emergency stop

Press the emergency button



BEYOND LIFT Platform Wheelchair Lift



Aluminum Alloy Material

Wheelchair lift uses high quality aluminium alloy as the main material, it's good-looking and it can protect the inside parts well.



Emergency Manual Valve

It can make the platform go down manually when power off or short out.



Non-slip Platform

It will make the wheelchair lift be stable and safe on the platform.



Automatic Safety sensor

Automatic sensor at platform bottom, it will stop the lift once it touches any obstacle.



Easy To Install And Operate

Preassembled product makes you have no worries with installation, remote control and button control makes it easy to operate.



Safety Ramp

Automatic ramp or fixed ramp could help the old and the disabled to get on the lift easily.

Detail Name

Description And Picture

Safety sensor

Automatical sensor at platform bottom, it will stop the lift once it touches any obstacle.




Emergency Stop

In the event of something emergency, this button is possible to prevent accidents.



Manual lowering valve

The wheelchair lift can be lowered by this valve manually when power failure.

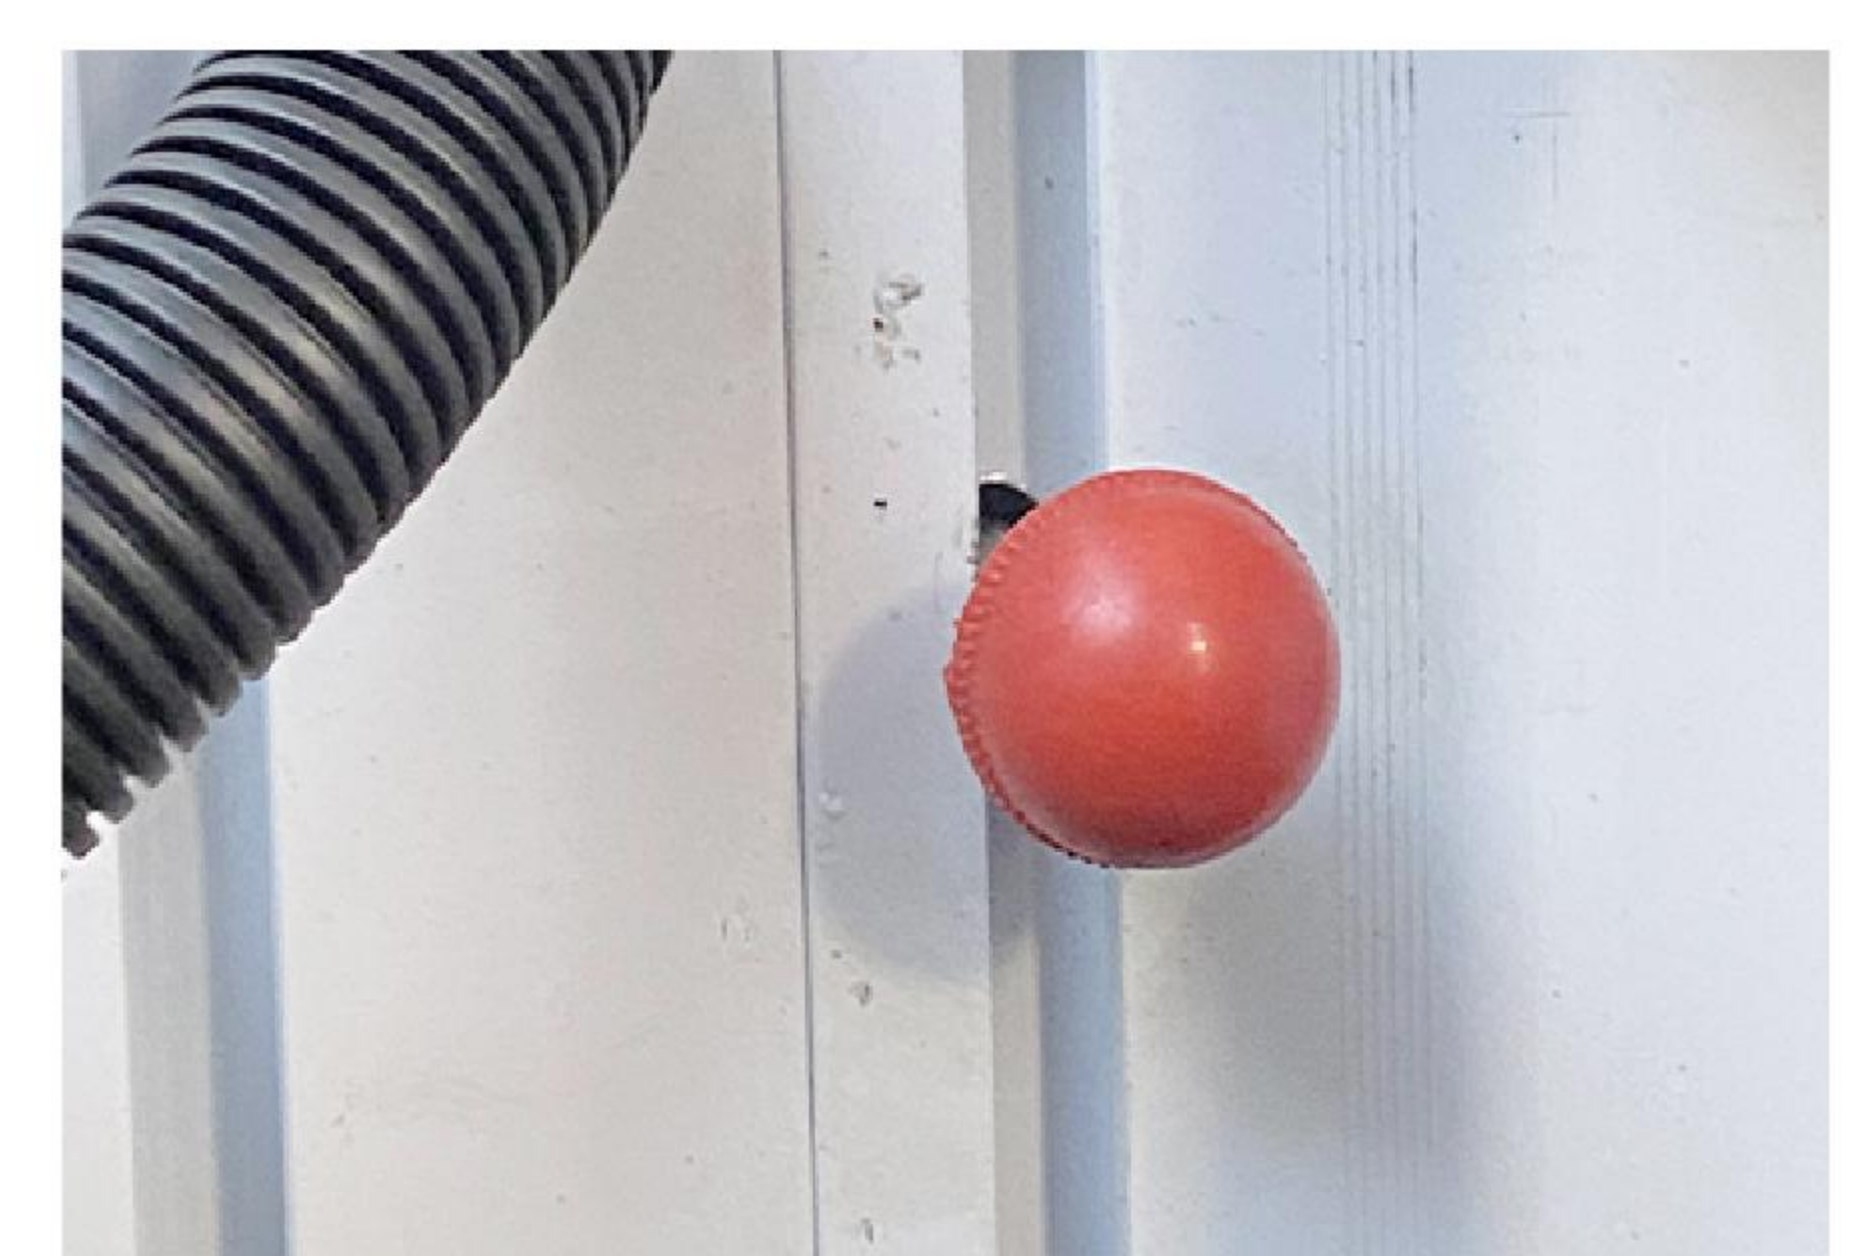

Remote control

With this you can call the wheelchair lift when you are far from it, it can reduce the waiting time.



Detail Name

Description And Picture

Electromagnetic Lock

When the platform is not on the second floor, the landing door cannot be opened.



Automatic ramp

This ramp could help the old and the disabled to get on the lift easily.




**Hydraulic
Power Unit**

The hydraulic power unit has incredible features: small, compact structure, lightweight, highly efficient, great working pressure, reliable performance and no leaks.



Adjustable fixing part

You can adjust it freely at any position to meet with the installation space.

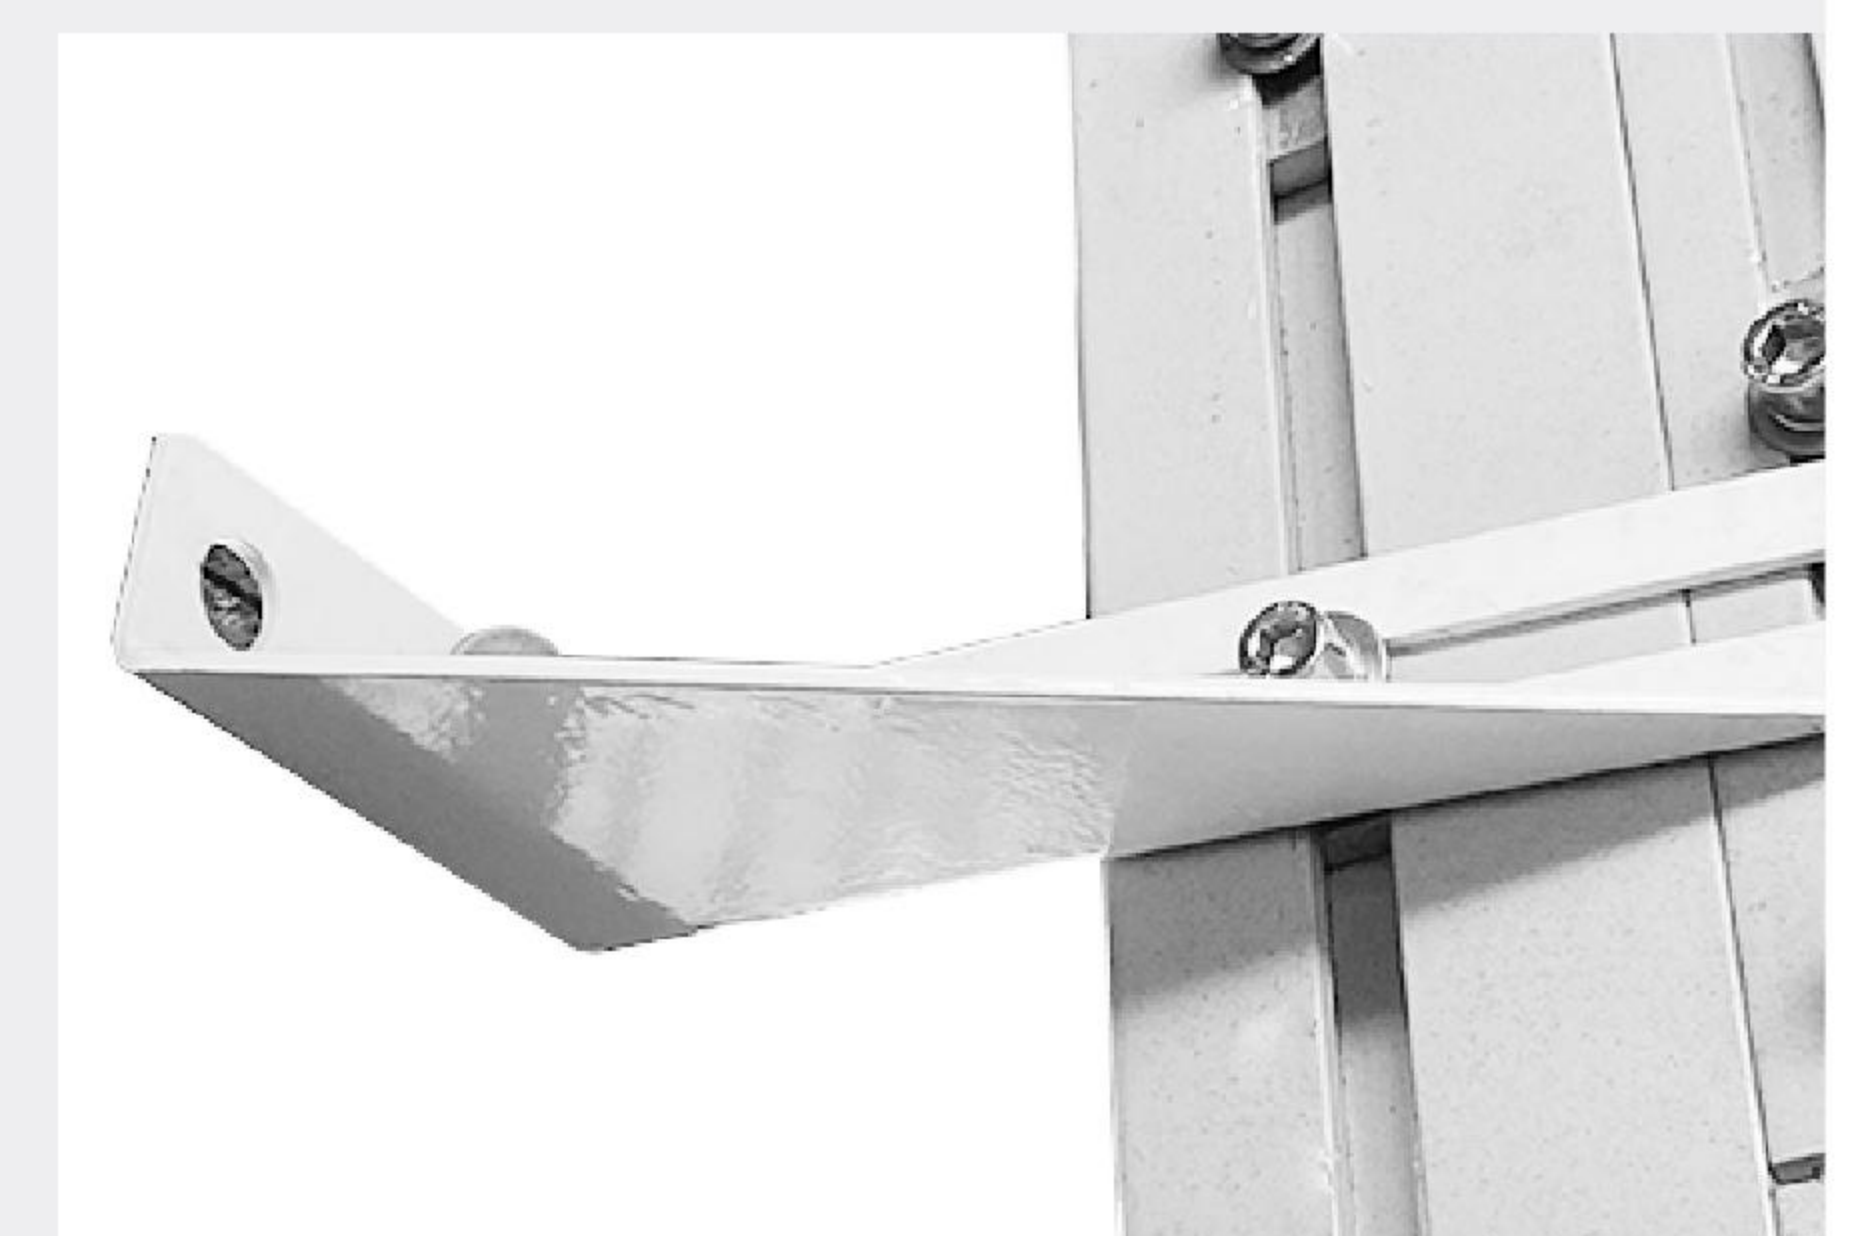

PRODUCT PHOTOS

04



Wheelchair lifts are specifically designed and manufactured for people with disabilities. In order to facilitate the travel and sightseeing of the disabled, in communities, hospitals, schools, hotels, hotels, public places and others. It can be used indoors or outdoors, with beautiful structure, safety and stability, and easy to use. It can be customized according to your requirements.